



Originale		Sostituto		Originale		Sostituto	
	Index		Play / Slow		6		6
	Red / -1		Red / Netflix / Search		Contrast-		<< / Tune-
	Green / Timer /		Green / APP / Repeat		Contrast+		>> / Tune+
	Yellow / Stop		Yellow / YouTube / Repeat		7		7
	Blue / Reveal		Blue / Prime Video / Random		8		8
	[≡]]]		Rec / Rec Mode		9		9
	Cancel		Exit / Cancel / Clear		Brightness-		I<< / Preset-
	Size		Zoom / Size		Brightness+		>>I / Preset+
	TV		TV/Radio /		P/C		Back / Return
	Text		Text / Goto		0		0
	1		1		AV		AV / Input / RDS
	2		2		←•→		Display / Media
	3		3		**		Smart / List
	Tint-		Shift + Left		PIP		Picture / Format
	Tint+		Shift + Right		i		Info / Angle
	4		4		i		Menu / Home
	5		5		----		Subtitle / EQ





Originale	Sostituto
 Up / P+	 Up
 Up / P+	 CH+ / Page+
 Mute	 Mute / Dimmer
 Left / Vol-	 Left
 Left / Vol-	 Vol-
 OK	 OK
 Right / Vol+	 Right
 Right / Vol+	 Vol+
 AUX	 Shift + 7
 Down / P-	 Down
 Down / P-	 CH- / Page-
 Power	 Power

Originale	Sostituto

 


 

 

 





 









 













 

 


























	Originale	Sostituto	Originale	Sostituto
	<	I<< / Preset-		
	>	>>I / Preset+		
	Rec	Rec / Rec Mode		
	Stop	Stop / Hold		
	<<	<< / Tune-		
	>>	>> / Tune+		
	Pause	Pause / Step / Freeze		
	Play	Play / Slow		
	P+	CH+ / Page+		
	P-	CH- / Page-		
	Power	Power		





Originale		Sostituto		Originale		Sostituto	
	Red		Red / Netflix / Search		*+		>> / Preset+
	Green/Timer		Green / APP / Repeat		P/C		Back / Return
	Yellow		Yellow / YouTube / Repeat		0		0
	Blue		Blue / Prime Video / Random		PIP		Picture / Format
	TXT		Text / Goto		i		Info / Angle
	1		1		P+		CH+ / Page+
	2		2		Up		Up
	3		3		Mute		Mute / Dimmer
	4		4		Left		Left
	5		5		Vol-		Vol-
	6		6		OK		OK
	-0		<< / Tune-		Right		Right
	0+		>> / Tune+		Vol+		Vol+
	7		7		AUX		Shift + 7
	8		8		P-		CH- / Page-
	9		9		Down		Down
	-*		<< / Preset-		Power		Power

