



Originale	Sostituto
Power	Power
DTV / ATV	Smart
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
- / +	+  Shift + Guide
Recall	Back
P.Mode	+  Shift + Format
S.Mode	Dual
Aspect	Format

Originale	Sostituto
Still	Pause
P -	Ch -
P +	Ch +
V -	Vol -
V +	Vol +
Sleep	Sleep
Mute	Mute
MTS	+  Shift + Media
Menu	Menu
Source	AV
Up	Up
Right	Right
Down	Down
Left	Left
Enter	Ok
Exit	Exit
i	Info





Originale		Sostituto		Originale		Sostituto	
	Red		Red		TV / Radio		TV/R
	Green		Green		List		List
	Yellow		Yellow		FAV		Pre Ch
	Blue		Blue		EPG		Guide
	Text / <<		Text		Rec		Rec
	Text / <<		<<		Rec Menu		Shift + Rec
	Hold / >>		>>		T.Shift		Shift + Smart
	Hold / >>		Shift + Pause		USB		Media
	Mix / I<<		I<<				
	Mix / I<<		Shift + Text				
	Timer / >>I		>>I				
	[≡] / Play/Pause		Play				
	[≡] / Play/Pause		Shift + Info				
	Size / Stop		Stop				
	Size / Stop		Eject				
	[ ? ]		D. Menu				
	Subtitle		Subt				

