



Originale	Sostituto
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
TV	TV/Radio /
Radio	Shift + TV/Radio / Program
Menu	Menu / Home
Exit	Exit / Cancel / Clear
P+	Shift + CH+ /

Originale	Sostituto
P+	>> / Preset+
P-	Shift + CH- /
P-	<< / Preset-
Up	Up
Down	Down
Right	Right
Left	Left
Up	CH+ / Page+
Down	CH- / Page-
OK	OK
Right	Vol+
Fav	Fav / Marker / PC
Left	Vol-
Info	Info / Angle
Lang / Red	Red / Netflix / Search
Lang / Red	Audio / Lang I/II
Pause / Blue	Blue / Prime Video / Random



Page+



Originale	Sostituto
PAUSE / Blue	Pause / Step / Freeze
SOUND / Green	Green / APP / Repeat
SOUND / Green	SOUND / Title
TEXT / Yellow	Yellow / YouTube / Repeat
TEXT / Yellow	Text / Goto
SAT	Shift + 0
SAT	Smart / List
Recall	Back / Return
TV / SAT	Display / Media
EPG	Guide / EPG / -/--

Originale	Sostituto

