

 

 

 





 

 

 









 




 






 
 

 
 





 
 
 



 













Originale	Sostituto
	 Power
	 Mute / Dimmer
	 Shift + Audio / Lang I/II
	 Shift + Picture / Format
	 Picture / Format
	 Sound / Title
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Shift + Guide / EPG / -/-
	 0

Originale	Sostituto
	 Back / Return
	 Display / Media
	 Pause / Step / Freeze
	 Rec / Rec Mode
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Sleep / Timer
	 Up
	 AV / Input / RDS
	 Left
	 OK
	 Right
	 Down
	 Menu / Home
	 Exit / Cancel / Clear



