










 
 



 












 
 
 

 



 

 







 

 



 


















Originale	Sostituto	Originale	Sostituto
 Power	 Power	 PR +	 Up
 Mute	 Mute	 PR -	 Ch -
 1	 1	 PR -	 Down
 2	 2	 Vol +	 Vol +
 3	 3	 Vol +	 Right
 4	 4	 Vol -	 Vol -
 5	 5	 Vol -	 Left
 6	 6	 OK	 Ok
 7	 7	 SWAP	 Back
 8	 8	 16:9	 Format
 9	 9	 White / i	 Info
 0	 0	 Red	 Red
 --	 GUIDE	 Green	 Green
 AV / TV	 TV/R	 Yellow	 Yellow
 Menu	 Menu	 Blue	 Blue
 TXT	 Text	 Stop	 Stop
 PR +	 Ch +	 Reveal	 Smart

Originale	Sostituto	Originale	Sostituto
 PR +	 Up	 TV	 AUX
 PR -	 Ch -	 DVD	 SAT
 PR -	 Down	 SLEEP	 REC MODE
 Vol +	 Vol +	 PLAY MODE	 STOP
 Vol +	 Right	 PAUSE	 EJECT
 Vol -	 Vol -	 STOP	 REC MODE
 Vol -	 Left	 LIST	 DUAL
 OK	 Ok	 SOUND	 AD
 SWAP	 Back	 SETTINGS	 OPT
 16:9	 Format	 PROG	 SUBT
 White / i	 Info	 SEARCH	 PICTURE
 Red	 Red	 ECO	 3D
 Green	 Green	 E-MANUAL	 TIMER
 Yellow	 Yellow	 REPEAT	 ZOOM
 Blue	 Blue	 TEXT	 AV
 Stop	 Stop	 TOP MENU	 DISPLAY INFO
 Reveal	 Smart	 MENU	 OK



