

 

 




 
 





 

 







Originale	Sostituto
PP	PP
	Back / Return
	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
P<P	P<P
0	0
	Menu / Home
	Info / Angle
	Audio / Lang I/II

Originale	Sostituto
	Mute / Dimmer
	Left
	Up
	Right
	OK
	Down
	Vol-
	Vol+
	CH- / Page-
	CH+ / Page+
	Red / Netflix / Search
	Sound / Title
	Green / APP / Repeat
	Picture / Format
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Text / Goto





Originale	Sostituto
[≡o]	Sleep / Timer
Hold	Stop / Hold
[≡X]	Exit / Cancel / Clear
Mix / PIP Swap	Smart / List
PIP / Size	Zoom / Size
PIP Down / [≡?]	I<< / Preset-
PIP Up / Index	>>I / Preset+
[TV]	TV/Radio /
[AV]	AV / Input / RDS

Originale	Sostituto

