



Originale	Sostituto	Originale	Sostituto
Standby	Power	Pic.Mode	Picture / Format
Mute	Mute / Dimmer	S.Mode	Sound / Title
1	1	Up	Up
2	2	Left	Left
3	3	OK	OK
4	4	Right	Right
5	5	Exit	Exit / Cancel / Clear
6	6	Down	Down
7	7	Menu	Menu / Home
8	8	Source	AV / Input / RDS
9	9	Vol+	Vol+
CH.List	Smart / List	Tv/Radio	TV/Radio /
0	0	CH+	CH+ / Page+
Recall	Back / Return	Vol-	Vol-
Aspect	Shift + Picture / Format	Display	Display / Media
Sleep	Sleep / Timer	CH-	CH- / Page-
Audio	Audio / Lang I/II	Red	Red / Netflix / Search

Originale	Sostituto	Originale	Sostituto
Pic.Mode	Picture / Format	Format	Picture / Format
S.Mode	Sound / Title	Title	Sound / Title
Up	Up	Up	Up
Left	Left	Left	Left
OK	OK	OK	OK
Right	Right	Right	Right
Exit	Exit / Cancel / Clear	Exit	Exit / Cancel / Clear
Down	Down	Down	Down
Menu	Menu / Home	Menu	Menu / Home
Source	AV / Input / RDS	Source	AV / Input / RDS
Vol+	Vol+	Vol+	Vol+
Tv/Radio	TV/Radio /	Tv/Radio	TV/Radio /
CH+	CH+ / Page+	CH+	CH+ / Page+
Vol-	Vol-	Vol-	Vol-
Display	Display / Media	Display	Display / Media
CH-	CH- / Page-	CH-	CH- / Page-
Red	Red / Netflix / Search	Red	Red / Netflix / Search



