































 



 



 

 

 



 



















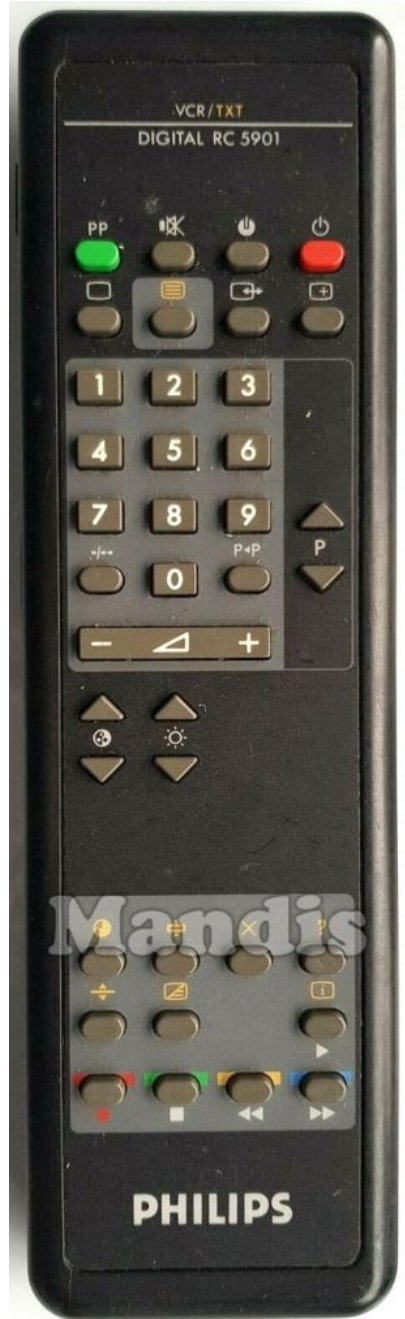



Originale		Sostituto		Originale		Sostituto	
	PP		Back / Return		P+		CH+ / Page+
	Mute		Mute / Dimmer		-/--		Guide / EPG / -/--
	(I)		OK		0		0
	Power		Power		P<P		Fav / Marker / PC
	[]		Display / Media		P-		CH- / Page-
	[=]		Text / Goto		Vol-		Vol-
	[↔]		AV / Input / RDS		Vol+		Vol+
	[+]		Smart / List		Colour+		Right
	1		1		Brightness-		Down
	2		2		Colour-		Left
	3		3		Brightness+		Up
	4		4		●		Setup / OPT /
	5		5		□		Stop / Hold
	6		6		X		Exit / Cancel / Clear
	7		7		[?]		D.Menu / Top
	8		8		◆		Zoom / Size
	9		9		[/ =]		Sleep / Timer









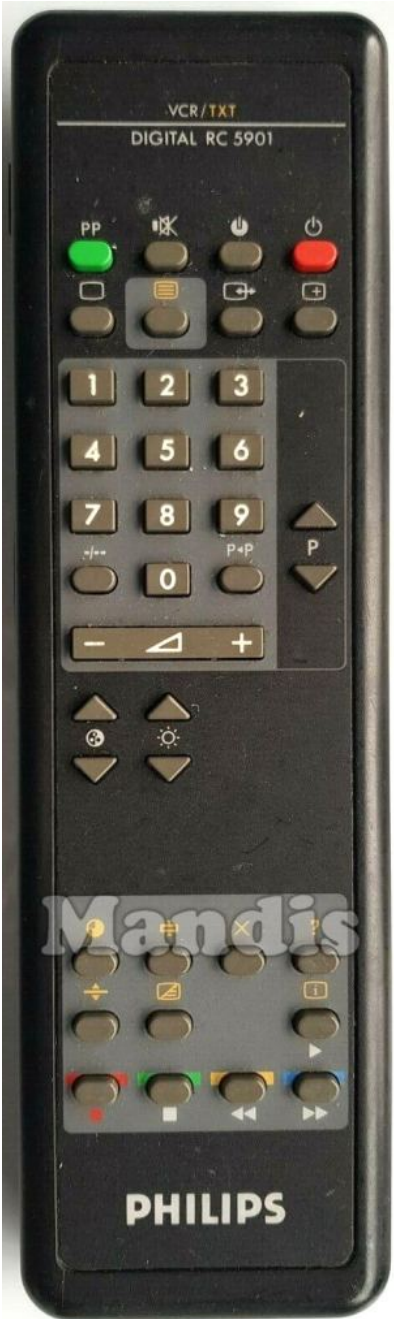
































































	Originale	Sostituto	Originale	Sostituto
	[i]	Info / Angle		
	Red	Red / Netflix / Search		
	Green	Green / APP / Repeat		
	Yellow	Yellow / YouTube / Repeat		
	Blue	Blue / Prime Video / Random		





Originale		Sostituto		Originale		Sostituto	
	PP		Back / Return		-/--		Guide / EPG / -/--
	Mute		Mute / Dimmer		0		0
	(I)		OK		P<P		Fav / Marker / PC
	Power		Power		P-		CH- / Page-
	[]		Display / Media		Vol-		Vol-
	[↔]		AV / Input / RDS		Vol+		Vol+
	[+]		Smart / List		●		Setup / OPT /
	1		1		□		TV/Radio /
	2		2		X		Exit / Cancel / Clear
	3		3		?		D.Menu / Top
	4		4		Size		Zoom / Size
	5		5		[=]		Text / Goto
	6		6		[/=]		Sleep / Timer
	7		7		Play		Play / Slow
	8		8		Rec		Rec / Rec Mode
	9		9		Stop		Stop / Hold
	P+		CH+ / Page+		<<		<< / Tune-



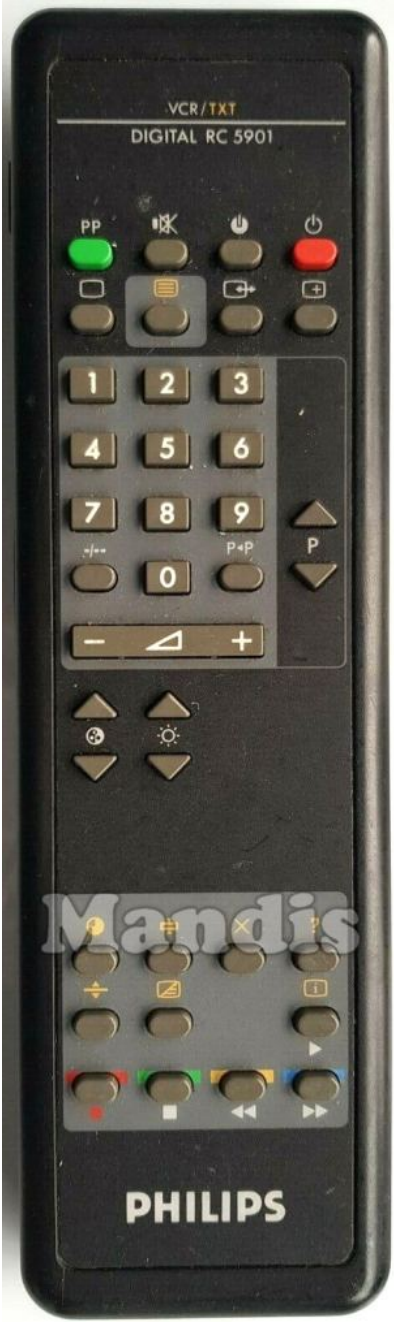

Originale	Sostituto	Originale	Sostituto
 >>	 >> / Tune+		

