











 


 

 


 
 


 



 


 



 
 


 
 


 
 



 

 
 


 



 
 

 

 
 

 

























 








 




Originale	Sostituto	Originale	Sostituto
 Power	 Power	 CH+	 Ch +
 Source	 AV	 CH-	 Ch -
 Sleep	 Sleep	 Down	 Down
 Mute	 Mute	 Right	 Right
 1	 1	 Left	 Left
 2	 2	 Vol-	 Vol -
 3	 3	 Vol+	 Vol +
 4	 4	 Enter	 Ok
 5	 5	 Red	 Red
 6	 6	 Green	 Green
 7	 7	 Yellow	 Yellow
 8	 8	 Blue	 Blue
 9	 9	 Info	 Info
 0	 0	 EPG	 Guide
 -/--	 Shift + Guide	 Menu	 Menu
 Recall	 Pre Ch	 Nicam	 Media
 Up	 Up	 FAV+	 >>

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 TV	 TV
 Source	 Source	 DVD	 DVD
 Sleep	 Sleep	 SAT	 SAT
 Mute	 Mute	 AUX	AUX
 1	 1	 PLAY MODE	 PLAY MODE
 2	 2	 REC MODE	REC MODE
 3	 3	 Play	 Play
 4	 4	 Pause	 Pause
 5	 5	 Stop	 Stop
 6	 6	 FF	 FF
 7	 7	 FF	 FF
 8	 8	 Still	 Still
 9	 9	 LIST	 LIST
 0	 0	 SOUND	 SOUND
 -/--	 -/--	 AD	 AD
 ENTER	 ENTER	 SETTINGS	SETTINGS
 EPG	 EPG	 DUAL	 DUAL
 Up	 Up	 SUBT	 SUBT
		 OPT	 OPT
		 PROG	 PROG
		 SEARCH	 SEARCH
		 PICTURE	 PICTURE
		 ECO	ECO
		 SLEEP	 SLEEP
		 TV/R	 TV/R
		 FORMAT	 FORMAT
		 3D	3D
		 TIMER	TIMER
		 D.MENU	 D.MENU
		 TEXT	 TEXT
		 ▲	 ▲
		 AV	AV
		 TOP MENU	 TOP MENU
		 INFO	 INFO
		 OK	 OK
		 CLEAR	 CLEAR
		 EXIT	 EXIT
		 RETURN	 RETURN
		 BACK	BACK
		 HOME	 HOME
		 SMART	 SMART
		 APP	 APP
		 MEDIA	MEDIA
		 CH+	 CH+
		 CH-	 CH-
		 1	 1
		 2	 2
		 3	 3
		 4	4
		 5	 5
		 6	 6
		 7	 7
		 8	8
		 9	 9
		 0	 0
		 FAV	 FAV
		 PRE-CH	PRE-CH
		 A	 A
		 B	 B
		 C	 C
		 D	D
		 GUIDE	 GUIDE
		 0	 0
		 PRE-CH	 PRE-CH
		 A	 A
		 B	 B
		 C	 C
		 D	D
		 Mandis SHOP	 Mandis SHOP
		 www.mandis.tv	 www.mandis.tv



