 





 





 

















 








Originale	Sostituto	Originale	Sostituto
	Power		Power
	Mute		Mute / Dimmer
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue / Timer		Blue / Prime Video / Random
	Format		Picture / Format
	RES.		AV / Input / RDS
	TTX		Text / Goto
	S-T		Subtitle / EQ
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Stop		Stop / Hold

Originale	Sostituto	Originale	Sostituto
	Rec		Rec / Rec Mode
	PVR List		Smart / List
	Menu		Menu / Home
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	OK		OK
	Right		Right
	EPG		Guide / EPG / -/-
	Down		Down
	Info		Info / Angle
	CH +		CH+ / Page+
	TV / Rad		TV/Radio /
	Vol +		Vol+
	CH -		CH- / Page-
	Audio		Audio / Lang I/II
	Vol -		Vol-





Originale		Sostituto	
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV		Fav / Marker / PC
	0		0
	Recall		Back / Return

Originale		Sostituto	

