



























 


| Originale | Sostituto |
|---|--|
|  Power |  Power |
|  Input |  AV / Input / RDS |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Info |  Info / Angle |
|  0 |  0 |
|  Guide |  Guide / EPG / -/-- |
|  Vol+ |  Vol+ |
|  Mute |  Mute / Dimmer |
|  P+ |  CH+ / Page+ |

| Originale | Sostituto |
|--|--|
|  Vol- |  Vol- |
|  Menu |  Menu / Home |
|  P- |  CH- / Page- |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Back |  Back / Return |
|  Down |  Down |
|  Exit |  Exit / Cancel / Clear |
|  I<< |  I<< / Preset- |
|  << |  << / Tune- |
|  >> |  >> / Tune+ |
|  >> |  >> / Preset+ |
|  Rec |  Rec / Rec Mode |
|  Stop |  Stop / Hold |
|  Play |  Play / Slow |





| Originale | Sostituto |
|--|---|
|  Pause |  Pause / Step / Freeze |
|  Red/A |  Red / Netflix / Search |
|  Green/B |  Green / APP / Repeat |
|  Yellow/C |  Yellow / YouTube / Repeat |
|  Blue/D |  Blue / Prime Video / Random |
|  List |  Smart / List |
|  Media |  Display / Media |
|  DVD |  Shift + 2 |
|  Radio |  TV/Radio / |
|  Audio |  Audio / Lang I/II |
|  [...] |  Subtitle / EQ |
|  [≡] |  Text / Goto |
|  [*] |  Setup / OPT / |

| Originale | Sostituto |
|-----------|-----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

