







 



 













 



 







Originale	Sostituto
	 AV / Input / RDS
	 Power
	 Smart / List
	 Display / Media
	 Mute / Dimmer
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Text / Goto
	 Blue / Prime Video / Random
	 Shift + Blue / Prime
	 Subtitle / EQ
	 Vol+
	 Info / Angle
	 CH+ / Page+
	 Vol-
	 CH- / Page-

Originale	Sostituto
	 Left
	 Up
	 OK
	 Right
	 Down
	 Back / Return
	 Exit / Cancel / Clear
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Audio / Lang I/II





Originale		Sostituto	
0	0	HDMI - BAT 0	0
MENU	Menu	HOME MENU	Menu / Home

Originale		Sostituto	

