

 
 




 



 
 

 


 


 
 



 

 
 








Originale	Sostituto	Originale	Sostituto
On/Off	 Power	Chan.Up	 Ch +
Mute	 Mute	Menu audio	 Dual
Info	 Info	Volume-	 Vol -
Subt.List	 Subt	Chan.Down	 Ch -
Return TV	 TV/R	1	 1
Menu video	 D. Menu	2	 2
Text	 Text	3	 3
Txt Expand	 Eject	4	 4
TV/AV	 AV	5	 5
Menu	 Menu	6	 6
Menu Up	 Up	7	 7
Display	 Shift + Info	8	 8
Menu Left	 Left	9	 9
OK Enter	 Ok	Guide -/-- 1.	 Guide
Menu Right	 Right	0/10	 0
Menu Down	 Down	Red	 Red
Volume+	 Vol +	Green	 Green



Originale	Sostituto	Originale	Sostituto
Yellow		Yellow	
Blue		Blue	

