



Originale	Sostituto	Originale	Sostituto
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P+		CH+ / Page+
	P-		CH- / Page-
	Vol+		Vol+
	Vol-		Vol-
	Open/Close		Eject / Surround
	Guide		Guide / EPG / -/--

Originale	Sostituto	Originale	Sostituto
	Mute		Mute / Dimmer
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Info		Info / Angle
	Exit		Exit / Cancel / Clear
	Media Center		Display / Media
	Up		Up
	Home Menu		Menu / Home
	Pop-Up Menu		D.Menu / Top
	Down		Down
	Left		Left
	Right		Right





Originale	Sostituto
	OK
	Setup / OPT /
	Back / Return
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Rec / Rec Mode
	Text / Goto
	Subtitle / EQ
	TV/Radio /
	Sleep / Timer
	Smart / List
	+ Shift + Display / Media
	Sound / Title
	Picture / Format
	Audio / Lang I/II

Originale	Sostituto
	Canal Play / Fav / Marker / PC
	Viera CAST / AV / Input / RDS
	+ Shift + Power
	+ Shift + Vol+
	+ Shift + Vol-
	+ Shift + CH+ /
	+ Shift + CH- /
	+ Shift + AV / Input / RDS

