


 



 


 

 




 

 


 
 
 
 

 
 

 
 

 
 




Originale	Sostituto
 Power	 Power
 Sleep	 Sleep
 Mute	 Mute
 Mode	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Nicam/A2	 Dual
 TXT / Mix	 Text
 TV / Radio	 TV/R

Originale	Sostituto
 List	 List
 Back	 Back
 Menu	 Menu
 CH +	 Ch +
 CH -	 Ch -
 Vol +	 Vol +
 Vol -	 Vol -
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 FAV	 Pre Ch
 EPG	 Guide
 Info	 Info
 Exit	 Exit
 Red	 Red





Originale		Sostituto		Originale		Sostituto	
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Hold		Stop				
	Index		Media				
	Size		Eject				
	Reveal		3D				
	Subtitle		Subt				
	Subpage	+	Shift + Subt				
	Picture		Format				
	Sound	+	Shift + Dual				

