











Originale	Sostituto
 Mute	 Mute / Dimmer
 Standby	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Options	 Setup / OPT /
 0	 0
 EPG	 Guide / EPG / -/--
 FAV	 Fav / Marker / PC
 Menu	 Menu / Home
 Info	 Info / Angle

Originale	Sostituto
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 V+	 Vol+
 Down	 Down
 P+	 CH+ / Page+
 V-	 Vol-
 P-	 CH- / Page-
 Page+	 Shift + CH+ /
 SAT	 Shift + 0
 Page-	 Shift + CH- /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue/Recall	 Back / Return



