





Originale		Sostituto		Originale		Sostituto	
	POWER		Power		9 wxyz		9
	←○		Shift + Smart / List		TV		TV/Radio /
	**/Ö		Shift + Display / Media		0		0
	*²/♀		Shift + Red / Netflix /		↔		Shift + Back / Return
	SOURCE		AV / Input / RDS		TV GUIDE		Guide / EPG / -/-
	PRESETS		Smart / List		[≡]		Text / Goto
	≡≡≡		Setup / OPT /		MENU		Menu / Home
	♪/☺/▶		Display / Media		Q.MENU		D.Menu / Top
	SLEEP		Sleep / Timer		UP		Up
	1 . / @		1		LEFT		Left
	2 abc		2		OK		OK
	3 def		3		RIGHT		Right
	4 ghi		4		DOWN		Down
	5 jkl		5		BACK		Back / Return
	6 mno		6		→◻←		Picture / Format
	7 pqrs		7		EXIT		Exit / Cancel / Clear
	8 tuv		8		*FAV		Fav / Marker / PC





Originale	Sostituto
 VOL+	 Vol+
 MUTE	 Mute / Dimmer
 P+	 CH+ / Page+
 VOL-	 Vol-
 INFO	 Info / Angle
 P-	 CH- / Page-
 REC	 Rec / Rec Mode
 PLAY	 Play / Slow
 PAUSE	 Pause / Step / Freeze
 STOP	 Stop / Hold
 LANG.	 Audio / Lang I/II
 <<<	 <<< / Tune-
 >>>	 >>> / Tune+
 [≡]...	 Sound / Title
 RED	 Red / Netflix / Search
 GREEN	 Green / APP / Repeat
 YELLOW	 Yellow / YouTube / Repeat

Originale	Sostituto
 BLUE	 Blue / Prime Video / Random

