




Originale	Sostituto	Originale	Sostituto
 Standby	 Power	 Pic.Mode	 Picture / Format
 Mute	 Mute / Dimmer	 S.Mode	 Sound / Title
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Exit	 Exit / Cancel / Clear
 6	 6	 Down	 Down
 7	 7	 Menu	 Menu / Home
 8	 8	 Source	 AV / Input / RDS
 9	 9	 Vol+	 Vol+
 CH.List	 Smart / List	 Tv/Radio	 TV/Radio /
 0	 0	 CH+	 CH+ / Page+
 Recall	 Back / Return	 Vol-	 Vol-
 Aspect	 Shift + Picture / Format	 Display	 Display / Media
 Sleep	 Sleep / Timer	 CH-	 CH- / Page-
 Audio	 Audio / Lang I/II	 Red	 Red / Netflix / Search

Originale	Sostituto	Originale	Sostituto
 Standby	 Power	 Pic.Mode	 Picture / Format
 Mute	 Mute / Dimmer	 S.Mode	 Sound / Title
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Exit	 Exit / Cancel / Clear
 6	 6	 Down	 Down
 7	 7	 Menu	 Menu / Home
 8	 8	 Source	 AV / Input / RDS
 9	 9	 Vol+	 Vol+
 CH.List	 Smart / List	 Tv/Radio	 TV/Radio /
 0	 0	 CH+	 CH+ / Page+
 Recall	 Back / Return	 Vol-	 Vol-
 Aspect	 Shift + Picture / Format	 Display	 Display / Media
 Sleep	 Sleep / Timer	 CH-	 CH- / Page-
 Audio	 Audio / Lang I/II	 Red	 Red / Netflix / Search



