



 








 
 
 







 



 

 

 





 











 





 












 

 











 
 


 







Originale	Sostituto
 Power	 Power
 Pause	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 Play	 Play / Slow
 >>	 >> / Tune+
 <<	 << / Tune-
 Guide	 Guide / EPG / -/--
 3D	 Shift + 3
 Smart Tv	 Smart / List
 Home	 Menu / Home
 Ambilight	 Display / Media
 [ <> ]	 Picture / Format
 TV	 TV/Radio /
 OK	 OK
 Up	 Up
 Down	 Down

Originale	Sostituto
 Right	 Right
 Left	 Left
 [i]/Info	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Back	 Back / Return
 List	 Shift + Smart / List
 III/Options	 Setup / OPT /
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 Vol-	 Vol-
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1





Originale		Sostituto	
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Subtitle		Subtitle / EQ
	Text		Text / Goto
	Source		AV / Input / RDS

Originale		Sostituto	

