







 



 





 

 



 

 

 

 

 





Originale	Sostituto
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
CH.List	Smart / List
0	0
Recall	Back / Return
Vol+	Vol+
PIC.Mode	Picture / Format
S.Mode	Sound / Title



 





Originale	Sostituto
CH+	CH+ / Page+
Vol-	Vol-
Source	AV / Input / RDS
CH-	CH- / Page-
Up	Up
Left	Left
OK	OK
Right	Right
Exit	Exit / Cancel / Clear
Down	Down
Menu	Menu / Home
Rec	Rec / Rec Mode
Timeshift	Shift + Pause / Step /
Timer	Shift + Sleep / Timer
Rec.List	Shift + Smart / List
Red	Red / Netflix / Search
Green	Green / APP / Repeat





Originale	Sostituto
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Aspect	 Shift + Picture / Format
 Tv/Radio	 TV/Radio /
 Sleep	 Sleep / Timer
 Subtitle	 Subtitle / EQ
 Index	 Info / Angle
 Reveal	 D.Menu / Top
 Audio	 Audio / Lang I/II
 Display	 Display / Media
 Text	 Text / Goto
 Size	 Zoom / Size
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Subpage	 Setup / OPT /
 Stop	 Stop / Hold
 Hold	 Shift + Stop / Hold

Hold

Originale	Sostituto
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+

