



Originale	Sostituto
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
Open/Close/Tv	Eject / Surround
4	4
5	5
6	6
Recall/Goto	Fav / Marker / PC
7	7
8	8
9	9
0	0
Tv Menu	Menu / Home
Source	AV / Input / RDS
UP	Up

Originale	Sostituto
Left	Left
OK	OK
Right	Right
DVD Menu	D.Menu / Top
Down	Down
Exit	Exit / Cancel / Clear
Vol+	Vol+
Sound	Sound / Title
CH+	CH+ / Page+
Vol-	Vol-
PIC	Picture / Format
CH-	CH- / Page-
Sleep	Sleep / Timer
Aspect	Shift + Picture / Format
Rec/DVD Setup	Rec / Rec Mode
Tv/Radio	TV/Radio /
Text	Text / Goto





Originale	Sostituto
Play/Pause/EPG	Play / Slow
Stop/FAV	Stop / Hold
Info	Info / Angle
Red/DVD/USB	Red / Netflix / Search
Green/Title	Green / APP / Repeat
Yellow/PBC	Yellow / YouTube / Repeat
Blue/Angle	Blue / Prime Video / Random
<<<	<<< / Tune-
>>>	>>> / Tune+
I<<<	I<<< / Preset-
>>>I	>>>I / Preset+
Play/Return	Shift + Play /
Pause/Display	Shift + Pause / Step /
Stop/DVD Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Reveal	Display / Media
Hold	Shift + Stop /

Hold

Originale	Sostituto
List	Smart / List
Index	Guide / EPG / -/-
Subpage	Back / Return
Size	Zoom / Size
Mix	Setup / OPT /
Freeze	Pause / Step / Freeze

