









 



 



 







 











 



 



 

 

 

 

 



 











Originale		Sostituto		Originale		Sostituto	
	Power		Power		Vol-		Vol-
	Mute		Mute / Dimmer		S.M.		Sound / Title
	1		1		CH-		CH- / Page-
	2		2		Menu		Menu / Home
	3		3		Exit		Exit / Cancel / Clear
	4		4		Up		Up
	5		5		Left		Left
	6		6		OK		OK
	7		7		Right		Right
	8		8		Info		Info / Angle
	9		9		Down		Down
	FAV		Fav / Marker / PC		Input		AV / Input / RDS
	0		0		Sleep		Sleep / Timer
	Recall		Back / Return		Aspect		Zoom / Size
	Vol+		Vol+		Subtitle		Subtitle / EQ
	P.M.		Picture / Format		Audio		Audio / Lang I/II
	CH+		CH+ / Page+		Cancel		Shift + Exit / Cancel / Clear





Originale	Sostituto
Reveal	Eject / Surround
Stop/Subpage	Stop / Hold
Play/Pause	Play / Slow
TTX	Text / Goto
I<</Index	I<< / Preset-
>>I/Hold	>>I / Preset+
<</List	<< / Tune-
>>/Size	>> / Tune+
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Rec	Rec / Rec Mode
Nothing	Shift + TV/Radio / Program
Rec Menu	D.Menu / Top
EPG	Guide / EPG / -/--
DTV/Radio	TV/Radio /

Originale	Sostituto
Freeze	Pause / Step / Freeze
DTV	Smart / List
Media	Display / Media

