 





































Originale	Sostituto
 Standby	 Power
 Auto	 Smart / List
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide / EPG / -/--
 Recall	 Back / Return
 Vol+	 Vol+
 Vol-	 Vol-

Originale	Sostituto
 Aspect	 Shift + Picture / Format
 Nicam	 Audio / Lang I/II
 Display	 Display / Media
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 LCD Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Input	 AV / Input / RDS
 PMode	 Picture / Format
 SMode	 Sound / Title
 Sleep	 Sleep / Timer
 Fav	 Fav / Marker / PC





Originale	Sostituto
 Fav-	 I<< / Preset-
 EPG	 Guide / EPG / /--
 Text	 Text / Goto
 Fav+	 >>I / Preset+
 Hold	 Stop / Hold
 Lang	 Shift + Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Index	 Info / Angle
 Size	 Zoom / Size
 Reveal	 TV/Radio /
 Subpage	 Eject / Surround
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Originale	Sostituto

