

 

 


 






 
 



 
 
 
 


 


 




 

 














 
 


 



 






Originale		Sostituto		Originale		Sostituto	
	Marche / Veille		Power		TV / Radio		TV/R
	Arret Son		Mute		Menu		Menu
	1		1		Quitter		Exit
	2		2		Up		Up
	3		3		Left		Left
	4		4		OK		Ok
	5		5		Right		Right
	6		6		Down		Down
	7		7		Rec		Rec
	8		8		Stop		Stop
	9		9		Vol +		Vol +
	0		0		Vol -		Vol -
	Info		Info		TTX		Text
	Retour		Back		FAV		Pre Ch
	EPG		Guide		CH +		Ch +
	Audio		Dual		CH -		Ch -
	S-Titres		Subt		D.D		Smart





Originale	Sostituto
 I<< Prev	 I<<
 Play / Lecture	 Play
 << REW	 <<
 Enreg.	 +  Shift + Rec
 >>  Next	 >>
 Pause	 Pause
 >> FWD	 >>
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue / Timer	 Blue
 Blue / Timer	 AV

Originale	Sostituto

