 

















 















| Originale | Sostituto |
|--|---|
|  Power |  Power |
|  TTX |  Text / Goto |
|  Fav |  Fav / Marker / PC |
|  Audio |  Audio / Lang I/II |
|  Mute |  Mute / Dimmer |
|  Play |  Play / Slow |
|  Pause |  Pause / Step / Freeze |
|  << |  << / Tune- |
|  >> |  >> / Tune+ |
|  Red / SOS |  Red / Netflix / Search |
|  Green / Sous |  Green / APP / Repeat |
|  Green / Sous |  Subtitle / EQ |
|  Yellow / Enreg |  Yellow / YouTube / Repeat |
|  Blue / Timer |  Blue / Prime Video / Random |
|  Blue / Timer |  Sleep / Timer |
|  Guide |  Guide / EPG / -/-- |
|  Up |  Up |

| Originale | Sostituto |
|--|---|
|  Infos |  Info / Angle |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Menu |  Menu / Home |
|  Down |  Down |
|  Quit |  Exit / Cancel / Clear |
|  Vol+ |  Vol+ |
|  Rec |  Rec / Rec Mode |
|  CH+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  Stop |  Stop / Hold |
|  CH- |  CH- / Page- |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |



