










 
 














 





	Originale	Sostituto	Originale	Sostituto
	Standby			>>I / Subpage
	Source			Menu / Home
	Red			Up
	Green			Exit / Cancel / Clear
	Yellow			Left
	Blue			OK
	e			Right
	Mouse			Pause / Step / Freeze
	Home			Play / Slow
	TXT			Down
	Mix/FAV.List			Stop / Hold
	Size/Subtitle			Vol+
	Cancel/Audio			Mute / Dimmer
	Record			CH+ / Page+
	<</Index			Vol-
	>>/Hold			Tv/Radio /
	I<</Reveal			CH- / Page-





Originale		Sostituto		Originale		Sostituto	
1	1	TV	1				
2	2	DVD	2				
3	3	CD - STB	3				
4	4	VIDEO	4				
5	5	TAPE	5				
6	6	TUNER	6				
7	7	AUX - HDD	7				
8	8	USB	8				
9	9	BLUETOOTH	9				
DISPLAY	[*]/Display	MEDIA DISPLAY	Display / Media				
0	0	HDMI - BAT	0				
RECALL	Recall	RETURN BACK	Back / Return				

