



Originale	Sostituto
Power	Power
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
TV/SAT	AV / Input / RDS
TV/Radio	TV/Radio /
Zoom	Zoom / Size
List	Smart / List
Audio	Audio / Lang I/II
EPG	Guide / EPG / -/--
Timer	Sleep / Timer
Text	Text / Goto
Exit	Exit / Cancel / Clear
Menu	Menu / Home
M/P	Display / Media
Mute	Mute / Dimmer

Originale	Sostituto
CH+	CH+ / Page+
CH-	CH- / Page-
Up	Up
Down	Down
Right	Right
Left	Left
OK	OK
Vol+	Vol+
Vol-	Vol-
Recall	Back / Return
P+	>> / Preset+
P-	<< / Preset-
FAV	Fav / Marker / PC
1	1
2	2
3	3
4	4






 

















 















 



















 



 






Originale	Sostituto
 Power	 Power
 SAT	 Smart / List
 Info	 Info / Angle
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / Zoom	 Zoom / Size
 0 / Zoom	 0
 Audio	 Audio / Lang I/II
 Mute	 Mute / Dimmer
 Recall	 Back / Return

Originale	Sostituto
 FAV	 Fav / Marker / PC
 Up / CH+	 CH+ / Page+
 Down / CH-	 Down
 Up / CH+	 Up
 Right / Vol+	 Right
 Right / Vol+	 Vol+
 Down / CH-	 CH- / Page-
 Left / Vol-	 Vol-
 Left / Vol-	 Left
 OK	 OK
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Blue / Pause	 Blue / Prime Video / Random
 Blue / Pause	 Pause / Step / Freeze
 Red / Text	 Red / Netflix / Search
 Red / Text	 Text / Goto
 Multivideo	 Display / Media



























Originale	Sostituto	Originale	Sostituto
Mute	 Mute / Dimmer	Menu Down	 Down
PWR On/Off	 Power	Back	 Back / Return
App	 +  Shift + Green / APP /	Volume+	 Vol+
Epg	 Guide / EPG / -/--	CH/Page+	 CH+ / Page+
Info	 Info / Angle	Volume-	 Vol-
Subt.List	 Subtitle / EQ	CH/Page-	 CH- / Page-
TV	 TV/Radio /	Audio	 Audio / Lang I/II
Text	 Text / Goto	1. ?	 1
Zoom	 Zoom / Size	2abc	 2
Menu	 Menu / Home	3def	 3
TV/SAT	 AV / Input / RDS	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 Display / Media	6mno	 6
Menu Left	 Left	7pqrm	 7
OK Enter	 OK	8tuv	 8
Menu Right	 Right	9wxyz	 9
Exit	 Exit / Cancel / Clear	Guide Pilote	 +  Shift + Guide / EPG / -/--

Originale	Sostituto	Originale	Sostituto
Mute	 Mute / Dimmer	Menu Down	 Down
PWR On/Off	 Power	Back	 Back / Return
App	 +  Shift + Green / APP /	Volume+	 Vol+
Epg	 Guide / EPG / -/--	CH/Page+	 CH+ / Page+
Info	 Info / Angle	Volume-	 Vol-
Subt.List	 Subtitle / EQ	CH/Page-	 CH- / Page-
TV	 TV/Radio /	Audio	 Audio / Lang I/II
Text	 Text / Goto	1. ?	 1
Zoom	 Zoom / Size	2abc	 2
Menu	 Menu / Home	3def	 3
TV/SAT	 AV / Input / RDS	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 Display / Media	6mno	 6
Menu Left	 Left	7pqrm	 7
OK Enter	 OK	8tuv	 8
Menu Right	 Right	9wxyz	 9
Exit	 Exit / Cancel / Clear	Guide Pilote	 +  Shift + Guide / EPG / -/--





Originale	Sostituto	Originale	Sostituto
Power		Power	Power
Mute		Mute / Dimmer	Mute / Dimmer
Pause		Pause / Step / Freeze	Pause / Step / Freeze
Audio		Audio / Lang I/II	Audio / Lang I/II
Zoom		Zoom / Size	Zoom / Size
Timer		Sleep / Timer	Sleep / Timer
Tv/Radio		TV/Radio /	TV/Radio /
Text		Text / Goto	Text / Goto
Tv/SAT		AV / Input / RDS	AV / Input / RDS
Menu		Menu / Home	Menu / Home
Up/CH+		Up	Up
Info		Info / Angle	Info / Angle
Left		Left	Left
OK		OK	OK
Right		Right	Right
Exit		Exit / Cancel / Clear	Exit / Cancel / Clear
Down/CH-		Down	Down

Originale	Sostituto	Originale	Sostituto
Recall		Back / Return	Back / Return
Vol+		Vol+	Vol+
List		Smart / List	Smart / List
P+		CH+ / Page+	CH+ / Page+
Vol-		Vol-	Vol-
M/P		Display / Media	Display / Media
P-		CH- / Page-	CH- / Page-
1		1	1
2		2	2
3		3	3
4		4	4
5		5	5
6		6	6
7		7	7
8		8	8
9		9	9
EPG		Guide / EPG / -/-	Guide / EPG / -/-



