





















 
 
















 









 

 



















Originale		Sostituto		Originale		Sostituto	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		Enter		OK
	Play		Play / Slow		Right		Right
	Pause		Pause / Step / Freeze		Reset		Exit / Cancel / Clear
	Stop		Stop / Hold		Down		Down
	<<		<< / Tune-		Return		Back / Return
	>>		>> / Tune+		Vol+		Vol+
	I<<		I<< / Preset-		Treb+		CH+ / Page+
	>>I		>>I / Preset+		Vol-		Vol-
	EQ		Subtitle / EQ		OSD		Display / Media
	Zoom		Zoom / Size		Treb-		CH- / Page-
	TV-Mode		TV/Radio /		1		1
	Setup		Setup / OPT /		2		2
	L/R		Text / Goto		3		3
	Input		AV / Input / RDS		4		4
	Menu		Menu / Home		5		5
	Up		Up		6		6



