











































































Originale	Sostituto	Originale	Sostituto
 Power	 Power	 10+	 Guide / EPG / -/-
 Mute	 Mute / Dimmer	 Zoom	 Zoom / Size
 EQ	 Subtitle / EQ	 Step (TV-Mode)	 Shift + Pause / Step /
 1	 1	 I<<	 I<< / Preset-
 2	 2	 >>I	 >>I / Preset+
 3	 3	 Stop	 Stop / Hold
 OSD	 Display / Media	 Play	 Play / Slow
 4	 4	 Pause	 Pause / Step / Freeze
 5	 5	 <<	 << / Tune-
 6	 6	 >>	 >> / Tune+
 L/R	 Text / Goto	 Slow	 Shift + Play /
 7	 7	 Up	 Up
 8	 8	 Menu	 Menu / Home
 9	 9	 Left	 Left
 P/N	 Fav / Marker / PC	 Enter	 OK
 Repeat	 Green / APP / Repeat	 Right	 Right
 0/10	 0	 Return	 Back / Return

Originale	Sostituto	Originale	Sostituto
 Power	 MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG VII	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	
 HOME	 ANGLE	 MENU	 INFO
 CLEAR	 EXIT	 CANCEL	 RETURN
 LIST	 SMART	 MEDIA	 CH PAGE
 VOL +	 DISPLAY	 TV	 DVD
 VOL -	 VIDEO	 TAPE	 TUNER
 1	 AUX-HDD	 USB	 BLUETOOTH
 2	 8	 HDMI-BAT	 PC
 3	 9	 GUIDE EPG	 FAV MARKER
 4	 NETFLIX	 APP	 YouTube
 5	 SEARCH	 REPEAT	 REPEAT A-B
 6	 RANDOM		
 7			
8			
9			
0			





Originale	Sostituto	Originale	Sostituto
	Down		Down
	Setup		Setup / OPT /
	Reset		Exit / Cancel / Clear
	Treb+		CH+ / Page+
	Sub+		Blue / Prime Video / Random
	Vol+		Vol+
	Input		AV / Input / RDS
	Treb-		CH- / Page-
	Sub-		Yellow / YouTube / Repeat
	Vol-		Vol-

