



Originale	Sostituto
Standby	Power
Equalizzatore	Shift + Sound / Title
Surround	Shift + Eject / Surround
Eject	Eject / Surround
Audio	Audio / Lang I/II
1	1
2	2
3	3
Angle	Info / Angle
4	4
5	5
6	6
Sottotitoli	Subtitle / EQ
7	7
8	8
9	9
Ricerca	Red / Netflix / Search

Originale	Sostituto
Canc	Exit / Cancel / Clear
0/10	0
10+	Guide / EPG / -/-
Titolo	Sound / Title
Up	Up
Menu	Menu / Home
Left	Left
OK	OK
Right	Right
Programm	TV/Radio /
Down	Down
Display	Display / Media
PAL/NTSC	D.Menu / Top
Setup	Setup / OPT /
Digest	Shift + D.Menu / Top Menu
Vol+	Vol+
Mute	Mute / Dimmer





	Originale	Sostituto	Originale	Sostituto
		Mark		Fav / Marker / PC
		Zoom		Zoom / Size
		Vol-		Vol-
		A-B		Yellow / YouTube / Repeat
		Ripeti		Back / Return
		Slow	+	Shift + Play /
		<</F.RWD		<< / Tune-
		F.FWD/>>		>> / Tune+
		I<< / Skip-		I<< / Preset-
		>>I / Skip+		>>I / Preset+
		Stop		Stop / Hold
		Pause/Step		Pause / Step / Freeze
		Play		Play / Slow

