 











 





 



 

 

 































 











Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Rec	 Rec / Rec Mode
 Mute	 Mute / Dimmer	 PVR List	 Smart / List
 Red	 Red / Netflix / Search	 Menu	 Menu / Home
 Green	 Green / APP / Repeat	 Up	 Up
 Yellow	 Yellow / YouTube / Repeat	 Exit	 Exit / Cancel / Clear
 Blue / Timer	 Blue / Prime Video / Random	 Left	 Left
 Format	 Picture / Format	 OK	 OK
 RES.	 AV / Input / RDS	 Right	 Right
 TTX	 Text / Goto	 EPG	 Guide / EPG / -/-
 S-T	 Subtitle / EQ	 Down	 Down
 I<<	 I<< / Preset-	 Info	 Info / Angle
 >>I	 >>I / Preset+	 CH +	 CH+ / Page+
 <<	 << / Tune-	 TV / Rad	 TV/Radio /
 >>	 >> / Tune+	 Vol +	 Vol+
 Play / Pause	 Play / Slow	 CH -	 CH- / Page-
 Play / Pause	 Pause / Step / Freeze	 Audio	 Audio / Lang I/II
 Stop	 Stop / Hold	 Vol -	 Vol-



