















Originale		Sostituto		Originale		Sostituto	
	Power		Power		5		5
	Red/↑		Red / Netflix / Search		6		6
	Green/↓		Green / APP / Repeat		7		7
	Yellow		Yellow / YouTube / Repeat		8		8
	Blue		Blue / Prime Video / Random		9		9
	[≡]		Text / Goto		FAV		Fav / Marker / PC
	[≡x]		Exit / Cancel / Clear		0		0
	EPG		Guide / EPG / -/-		Tv/DTV		TV/Radio /
	[*]/[■]		Zoom / Size		Vol-		Vol-
	Screen		Picture / Format		Vol+		Vol+
	Lang		Audio / Lang I/II		Mute		Mute / Dimmer
	Subtitle		Subtitle / EQ		PR-		CH- / Page-
	Sleep		Sleep / Timer		PR+		CH+ / Page+
	1		1		Preset		Smart / List
	2		2		Source		AV / Input / RDS
	3		3		Info/[≡?]		Info / Angle
	4		4		Swap/Recall		Display / Media





Originale

Sostituto

	Return		Back / Return
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	M		Menu / Home

Originale

Sostituto

