 








 



 
 



 





 


 


 

 






 

 





 

 

 

 

 













Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH+	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol+	 Vol+
 6	 6	 CH-	 CH- / Page-
 7	 7	 List/Repeat	 Smart / List
 8	 8	 Vol-	 Vol-
 9	 9	 ♥/Title	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep/Menu	 Sleep / Timer
 0	 0	 EPG/Setup	 Guide / EPG / -/-
 O)/I-II/Audio	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red	 Red / Netflix / Search
 Exit	 Exit / Cancel / Clear	 <<	 << / Tune-

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH+	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol+	 Vol+
 6	 6	 CH-	 CH- / Page-
 7	 7	 List/Repeat	 Smart / List
 8	 8	 Vol-	 Vol-
 9	 9	 ♥/Title	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep/Menu	 Sleep / Timer
 0	 0	 EPG/Setup	 Guide / EPG / -/-
 O)/I-II/Audio	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red	 Red / Netflix / Search
 Exit	 Exit / Cancel / Clear	 <<	 << / Tune-





Originale		Sostituto		Originale	Sostituto
	Green		Green / APP / Repeat		
	>>		>> / Tune+		
	Yellow		Yellow / YouTube / Repeat		
	l<<		l<< / Preset-		
	Blue		Blue / Prime Video / Random		
	>>l		>>l / Preset+		
	[=]		Text / Goto		
	Play		Play / Slow		
	Pause		Pause / Step / Freeze		
	[=+]		Picture / Format		
	Stop/Still		Stop / Hold		
	Radio/Open/Close		TV/Radio /		
	[=◆]/[++]		Zoom / Size		
	[=x]		Setup / OPT /		
	[=o]/Subtitle		Subtitle / EQ		
	DMP		D.Menu / Top		
	Rec		Rec / Rec Mode		

