


 







 
 

 




 


 



 









| Originale | Sostituto |
|--|--|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  Open/Close |  Eject / Surround |
|  Setup |  Setup / OPT / |
|  N/P |  Picture / Format |
|  DVD/DVB/Card |  AV / Input / RDS |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0/10 |  0 |
|  10+ |  Guide / EPG / -/-- |

| Originale | Sostituto |
|---|--|
|  Display |  Display / Media |
|  PBC |  Smart / List |
|  Title |  Sound / Title |
|  Menu |  Menu / Home |
|  Up |  Up |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Down |  Down |
|  Search |  Shift + Red / Netflix / |
|  Mark |  Fav / Marker / PC |
|  Program |  Shift + TV/Radio / Program |
|  Zoom |  Zoom / Size |
|  Stop |  Stop / Hold |
|  Pause |  Pause / Step / Freeze |
|  Play |  Play / Slow |
|  Vol+ |  Vol+ |



