




 



 

 
 







 
 
| Originale | Sostituto |
|--|--|
|  Power |  Power |
|  123 / keypad |  Eject / Surround |
|  Extra |  D.Menu / Top |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  Return |  Back / Return |
|  Vol Up |  Vol+ |
|  Home / Hub |  Smart / List |
|  CH Up |  CH+ / Page+ |
|  Vol Down |  Vol- |
|  CH Down |  CH- / Page- |
|  Play / Pause |  Shift + Play / |
| Mute |  Mute / Dimmer |
| Play |  Play / Slow |

| Originale | Sostituto |
|------------|---|
| Pause |  Pause / Step / Freeze |
| Stop |  Stop / Hold |
| Rec |  Rec / Rec Mode |
| << |  << / Tune- |
| >> |  >> / Tune+ |
| I<< |  I<< / Preset- |
| >>I |  >>I / Preset+ |
| S.Mode |  Sound / Title |
| AD |  Audio / Lang I/II |
| AD / Subt. |  Subtitle / EQ |
| Picture |  Picture / Format |
| P.Size |  Zoom / Size |
| Sleep |  Sleep / Timer |
| Auto Prog |  TV/Radio / |
| Tools |  Setup / OPT / |
| TTX/MIX |  Text / Goto |
| Source |  AV / Input / RDS |





| Originale | Sostituto | Originale | Sostituto |
|-----------|---|-------------|---|
| Menu |  Menu / Home | Prime Video |  Shift + Blue / Prime |
| Info |  Info / Angle | Rakuten Tv |  Shift + Green / APP / |
| Exit |  Exit / Cancel / Clear | Netflix |  Shift + Red / Netflix / |
| CH List |  Display / Media | Still |  Shift + Pause / Step / |
| 1 |  1 | Dual I-II |  Shift + Audio / Lang I/II |
| 2 |  2 | Add / Del |  Shift + Eject / Surround |
| 3 |  3 | TV / DTV |  Shift + TV/Radio / Program |
| 4 |  4 | E-Manual |  Shift + OK |
| 5 |  5 | Media P. |  Shift + Display / Media |
| 6 |  6 | -/-- |  Shift + Guide / EPG / -/-- |
| 7 |  7 | PRE-CH |  Shift + Fav / Marker / PC |
| 8 |  8 | Red |  Red / Netflix / Search |
| 9 |  9 | Yellow |  Yellow / YouTube / Repeat |
| Guide |  Guide / EPG / -/-- | Blue |  Blue / Prime Video / Random |
| 0 |  0 | Green |  Green / APP / Repeat |
| Fav CH |  Fav / Marker / PC | | |
| Search |  Shift + Yellow / YouTube / Repeat | | |

| Originale | Sostituto | Originale | Sostituto |
|-------------|---|-------------|---|
| Prime Video |  Shift + Blue / Prime | Prime Video |  Prime Video / Random |
| Rakuten Tv |  Shift + Green / APP / | Rakuten Tv |  APP / Repeat |
| Netflix |  Shift + Red / Netflix / | Netflix |  Netflix / Search |
| Still |  Shift + Pause / Step / | Still |  Step / Freeze |
| Dual I-II |  Shift + Audio / Lang I/II | Dual I-II |  Lang I/II / Audio |
| Add / Del |  Shift + Eject / Surround | Add / Del |  Surround |
| TV / DTV |  Shift + TV/Radio / Program | TV / DTV |  TV / Radio / Program |
| E-Manual |  Shift + OK | E-Manual |  OK |
| Media P. |  Shift + Display / Media | Media P. |  Media / Display |
| -/-- |  Shift + Guide / EPG / -/-- | -/-- |  Guide / EPG |
| PRE-CH |  Shift + Fav / Marker / PC | PRE-CH |  PC / Fav / Marker |
| Red |  Red / Netflix / Search | Red |  Red / Netflix / Search |
| Yellow |  Yellow / YouTube / Repeat | Yellow |  Yellow / YouTube / Repeat |
| Blue |  Blue / Prime Video / Random | Blue |  Blue / Prime Video / Random |
| Green |  Green / APP / Repeat | Green |  Green / APP / Repeat |
| | | | |
| | | | |

