
 

 

 

 

 

 

 

 

 

 

 

 

 

 

 

 

 






































 


Originale	Sostituto
 Power	 Power
 123 / keypad	 Eject / Surround
 Extra	 D. Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Return	 Back / Return
 Vol Up	 Vol +
 Home / Hub	 Smart / List
 CH Up	 CH+ / Page+
 Vol Down	 Vol -
 CH Down	 CH- / Page-
 Play / Pause	 Shift + Play / Slow
 Mute	 Mute / Dimmer
 Play	 Play / Slow

Originale	Sostituto
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 << / Tune-	 << / Tune-
 >> / Tune+	 >> / Tune+
 I << / Preset-	 I << / Preset-
 >> I / Preset+	 >> I / Preset+
 S. Mode	 Sound / Title
 AD	 Audio / Lang I/II
 AD / Subt.	 Subtitle / EQ
 Picture	 Picture / Format
 P. Size	 Zoom / Size
 Sleep	 Sleep / Timer
 Auto Prog	 TV/Radio /
 Tools	 Set up / OPT /
 TTX/MX	 Text / Goto
 Source	 AV / Input / RDS





Originale	Sostituto	Originale	Sostituto
Menu	 Menu / Home	Prime Video	 Shift + Blue / Prime
Info	 Info / Angle	Rakuten Tv	 Shift + Green / APP
Exit	 Exit / Cancel / Clear	Netflix	 Shift + Red / Netflix
CH List	 Display / Media	Still	 Shift + Pause / Step
1	 1	Dual I-II	 Shift + Audio / Lang I/II
2	 2	Add / Del	 Shift + Eject / Surround
3	 3	TV / DTV	 Shift + TV/ Radio / Program
4	 4	E-Manual	 Shift + OK
5	 5	Media P.	 Shift + Display / Media
6	 6	- / - -	 Shift + Guide / EPG / - / - -
7	 7	PRE-CH	 Shift + Fav / Marker / PC
8	 8	Red	 Red / Netflix / Search
9	 9	Yellow	 Yellow / YouTube / Repeat
Guide	 Guide / EPG / - / - -	Blue	 Blue / Prime Video / Random
0	 0	Green	 Green / APP / Repeat
Fav CH	 Fav / Marker / PC		
Search	 Shift + Yellow / YouTube / Repeat		

Originale	Sostituto	Originale	Sostituto
Prime Video	 Shift + Blue / Prime	Prime Video	 Prime Video / Random
Rakuten Tv	 Shift + Green / APP	Rakuten Tv	 APP / Repeat
Netflix	 Shift + Red / Netflix	Netflix	 NETFLIX / Search
Still	 Shift + Pause / Step	Still	 STEP-FREEZE
Dual I-II	 Shift + Audio / Lang I/II	Dual I-II	 LANG I/II / AUDIO
Add / Del	 Shift + Eject / Surround	Add / Del	 SURROUND
TV / DTV	 Shift + TV/ Radio / Program	TV / DTV	 PROGRAM / TV/RADIO
E-Manual	 Shift + OK	E-Manual	 OK
Media P.	 Shift + Display / Media	Media P.	 MEDIA / DISPLAY
- / - -	 Shift + Guide / EPG / - / - -	- / - -	 GUIDE / EPG
PRE-CH	 Shift + Fav / Marker / PC	PRE-CH	 PC / FAV MARKER
Red	 Red / Netflix / Search	Red	 NETFLIX / SEARCH
Yellow	 Yellow / YouTube / Repeat	Yellow	 YouTube / REPEAT A-B
Blue	 Blue / Prime Video / Random	Blue	 Prime Video / RANDOM
Green	 Green / APP / Repeat	Green	 APP / REPEAT

