



Originale	Sostituto	Originale	Sostituto
Power	Power	Audio	Dual
Open/Close	Eject	TRK Up	Vol +
1	1	TRK Down	Vol -
2	2	Prog Up	Ch +
3	3	Prog Down	Ch -
4/<< Shuttle	4	F.ADV/Step	Yellow
5	5	I<<	I<<
6/Shuttle >>	6	<<	<<
7	7	Stop	Stop
8	8	Play	Play
9	9	Pause	Pause
0	0	>>I	>>I
Clear	Exit	>>	>>
Tv/VCR	TV/R	Menu	Menu
DVD	Media	Subtitle	Subt
VCR	Smart	Info	Info
Input Sel	AV	Return	Back

Originale	Sostituto	Originale	Sostituto
Power	Power	Audio	Dual
Open/Close	Eject	TRK Up	Vol +
1	1	TRK Down	Vol -
2	2	Prog Up	Ch +
3	3	Prog Down	Ch -
4/<< Shuttle	4	F.ADV/Step	Yellow
5	5	I<<	I<<
6/Shuttle >>	6	<<	<<
7	7	Stop	Stop
8	8	Play	Play
9	9	Pause	Pause
0	0	>>I	>>I
Clear	Exit	>>	>>
Tv/VCR	TV/R	Menu	Menu
DVD	Media	Subtitle	Subt
VCR	Smart	Info	Info
Input Sel	AV	Return	Back





Originale	Sostituto
Up	Up
Left	Left
OK	Ok
Right	Right
Down	Down
Rec	Rec
Speed	Red
EZ View	3D
Disc Menu	D. Menu
IPC/Angle	Green
Repeat/Mode	Text
Search/Mark	Format
Timer	Shift + AV

Originale	Sostituto

