 

 

 
 
 
 

 
 
 





 

 

 
 

 


 
 
 

 



 









 

 
 

 
 

 
 














Originale	Sostituto
 Power	 Power
 Source	 AV
 Subt.	 Subt
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 PRE-CH	 Pre Ch
 TTX/MIX	 Text
 HDMI	 Smart

Originale	Sostituto
 DTV	 TV/R
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 PR+	 Ch +
 PR-	 Ch -
 CH.List	 List
 Menu	 Menu
 Media.P	 Media
 Guide	 Guide
 Tools	 Options
 Info	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok





Originale		Sostituto		Originale		Sostituto	
	Return		Back		Pause		Pause
	Exit		Exit		>>		>>
	Red/A		Red				
	Green/B		Green				
	Yellow/C		Yellow				
	Blue/D		Blue				
	PIP		3D				
	PIP Down		I<<				
	PIP Up		>>I				
	P.Mode		Shift + Format				
	SRS		Dual				
	P.Size		Format				
	Still		D. Menu				
	Rec		Rec				
	Stop		Stop				
	<<		<<				
	Play		Play				

