



 


 



 



 



 
 






 











 
 



















































 










Originale	Sostituto	Originale	Sostituto
 Power	 Power	 VOL-	 Vol-
 Source	 AV / Input / RDS	 CH.LIST	 Display / Media
 1	 1	 CH.LIST	 Shift + Smart / List
 2	 2	 PR-	 CH- / Page-
 3	 3	 Menu	 Menu / Home
 4	 4	 Smart HUB	 Smart / List
 5	 5	 Guide	 Guide / EPG / -/--
 6	 6	 Tools	 Setup / OPT /
 7	 7	 Up	 Up
 8	 8	 Info	 Info / Angle
 9	 9	 Left	 Left
 TTX/MIX	 Text / Goto	 Enter	 OK
 0	 0	 Right	 Right
 PRE-CH	 Back / Return	 Return	 Shift + Back / Return
 VOL+	 Vol+	 Down	 Down
 Mute	 Mute / Dimmer	 Exit	 Exit / Cancel / Clear
 PR+	 CH+ / Page+	 Red/A	 Red / Netflix / Search

Originale	Sostituto	Originale	Sostituto
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
www.mandis.it			





Originale	Sostituto
 Green/B	 Green / APP / Repeat
 Yellow/C	 Yellow / YouTube / Repeat
 Blue/D	 Blue / Prime Video / Random
 E-Manual	 D.Menu / Top
 3D	 Picture / Format
 AD/Subt	 Subtitle / EQ
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 <<	 << / Tune-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 >>I	 >>I / Preset+

Originale	Sostituto

