



 


 

 

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 

 









Originale	Sostituto
 Power	 Power
 Source	 AV
 Sports	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TTX/MIX	 Text
 PRE-CH	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -

Originale	Sostituto
 Mute	 Mute
 PR+	 Ch +
 PR-	 Ch -
 CH.LIST	 List
 Menu	 Menu
 Smart HUB	 Smart
 Guide	 Guide
 Tools	 Options
 Info	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Return	 Back
 Exit	 Exit
 Red/A	 Red





Originale		Sostituto		Originale	Sostituto
	Green/B		Green		
	Yellow/C		Yellow		
	Blue/D		Blue		
	E-Manual	 + 	Shift + D. Menu		
	Extra		D. Menu		
	Search		TV/R		
	PIC.Size		Format		
	Picture	 + 	Shift + Format		
	AD/Subt		Subt		
	<</ <<		<<		
	Pause		Pause		
	>>/>>		>>		
	Rec		Rec		
	Play		Play		
	Stop		Stop		

