



Originale	Sostituto	Originale	Sostituto
Power	Power	PR+	CH+ / Page+
TV	Display / Media	PR-	CH- / Page-
1	1	Source	AV / Input / RDS
2	2	Info	Info / Angle
3	3	Menu	Menu / Home
4	4	Guide	Guide / EPG / -/--
5	5	Tools	Setup / OPT /
6	6	Return	Back / Return
7	7	Up	Up
8	8	Down	Down
9	9	Right	Right
0	0	Left	Left
PRE-CH	Shift + Fav / Marker / PC	Enter	OK
Vol+	Vol+	CH List	Smart / List
FAV.CH	Fav / Marker / PC	Exit	Exit / Cancel / Clear
Vol-	Vol-	Red	Red / Netflix / Search
Mute	Mute / Dimmer	Green	Green / APP / Repeat

Originale	Sostituto	Originale	Sostituto
PR+	CH+ / Page+	PR-	CH- / Page-
Source	AV / Input / RDS	Info	Info / Angle
Menu	Menu / Home	Guide	Guide / EPG / -/--
Tools	Setup / OPT /	Return	Back / Return
Up	Up	Down	Down
Right	Right	Left	Left
Enter	OK	CH List	Smart / List
Exit	Exit / Cancel / Clear	Red	Red / Netflix / Search
Green	Green / APP / Repeat		





Originale		Sostituto		Originale		Sostituto	
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	TTX/MIX		Text / Goto				
	AD		Audio / Lang I/II				
	SUBT.		Subtitle / EQ				

