



 

 

 

 

 



 

 



 









 





Originale	Sostituto
 Standby/On	 Power
 Eject	 Eject / Surround
 1/Slow-	 1
 2	 2
 3/Slow+	 3
 4/Shuttle-	 4
 5	 5
 6/Shuttle+	 6
 7/V-Lock Down	 7
 8	 8
 9/V-Lock Up	 9
 CLR/RST	 Exit / Cancel / Clear
 0/F.ADV	 0
 Index	 Info / Angle
 A.TRK	 Smart / List
 IPC	 D.Menu / Top
 Input	 AV / Input / RDS

Originale	Sostituto
 Repeat	 Green / APP / Repeat
 Audio	 Audio / Lang I/II
 TRK+	 >>I / Preset+
 Prog+	 CH+ / Page+
 Display	 Display / Media
 TRK-	 I<< / Preset-
 Prog-	 CH- / Page-
 <<	 << / Tune-
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 OK	 OK





Originale	Sostituto	Originale	Sostituto
	 Right		
	 Down		
	 Speed Picture / Format		
	 DUB Sound / Title		
	 TV/VCR TV/ Radio /		
	 Timer Sleep / Timer		

