



| Originale | Sostituto |
|---------------|-------------|
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |
| Tv/DVD | SEARCH TV/R |
| INPUT SEL | TIMER AV |
| SUBTITLE | AD SUBT |
| Tv Vol+ | + VOL |
| Tv Vol- | VOL - |
| Tv Mute/Audio | MUTE |
| OK | OK |

| Originale | Sostituto |
|----------------------|----------------------|
| ▲ | Up |
| ▼ | Down |
| ▶ | Right |
| ◀ | Left |
| OPEN/CLOSE | ZOOM |
| MENU | TOP MENU MENU |
| RETURN | RETURN BACK |
| TITLE LIST DISC MENU | SETTINGS OPT |
| EXIT | CLEAR EXIT |
| PLAY LIST TITLE MENU | SOUND DUAL |
| TIMER | PROG SLEEP |
| MARKER | SHIFT + SETTINGS OPT |
| COPY | FAV PRE-CH |
| REC MODE | SHIFT + REC MODE |
| REC PAUSE | PICTURE FORMAT |
| STANDBY/ON | Power |
| Tv Standby/on | SHIFT + Power |



 



 



 

 











 
 

 




 
 
 



 
 
| Originale | Sostituto |
|-----------|---------------|
| Pause | Pause |
| Stop | Stop |
| Play | Play |
| >> | >> |
| << | << |
| Rec | Rec |
| Info | Info |
| Red/A | Red |
| Green/B | Green |
| Yellow/C | Yellow |
| Blue/D | Blue |
| >>I | >>I |
| I<< | I<< |
| Tv Prog+ | + Shift + Up |
| Tv Prog- | Ch + |
| | |
| | |

| Originale | Sostituto |
|-----------|-----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |



 

 




 
| Originale | Sostituto |
|---|---|
|  Standby/on |  Power |
|  Tv Standby/on |  Shift + Power |
|  Open/Close |  Eject |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Input Sel |  AV |
|  Tv/DVD |  TV/R |
|  Subtitle |  Subt |
|  Pause |  Pause |

| Originale | Sostituto |
|---|--|
|  Play |  Play |
|  Stop |  Stop |
|  >> |  >> |
|  << |  << |
|  >> |  >> |
|  << |  << |
|  Tv Mute/Audio |  Mute |
|  Tv Vol+ |  Vol + |
|  Tv Vol- |  Vol - |
|  Prog Up |  Shift + Up |
|  Prog Down |  Ch + |
|  Red/A |  Red |
|  Green/B |  Green |
|  Yellow/C |  Yellow |
|  Blue/D |  Blue |
|  Rec |  Rec |
|  Menu |  Menu |





| Originale | | Sostituto | |
|---|---------------------------|---|-----------------|
|  | Return |  | Back |
|  | Exit |  | Exit |
|  | Info |  | Info |
|  | Title List/ Disc Menu |  | Options |
|  | Play List/Title Menu |  | Dual |
|  | OK |  | Ok |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | Timer/Repeat |  | Sleep |
|  | Marker |  | Shift + Options |
|  | Copy |  | Pre Ch |
|  | Rec Mode |  | Shift + Rec |
|  | Pause/Rec Pause/Timeshift |  | Format |
|  | DVD |  | Shift + 1 |
|  | HDD |  | Shift + 2 |

| Originale | | Sostituto | |
|---|-----|---|-----------|
|  | USB |  | Shift + 3 |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

