




 

 



 

 

 

 

 

 

 

 

 

 

 

 





Originale	Sostituto
 Power	 Power
 PowerTv	 +  Shift + Power
 Eject	 Eject / Surround
 TTX/MIX	 Text / Goto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 DiscMenu	 D.Menu / Top
 0	 0
 TitleMenu/POPUP	 Sound / Title
 I<<	 I<< / Preset-

Originale	Sostituto
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Tv Vol+	 Vol+
 Tv Mute	 Mute / Dimmer
 Prog+	 CH+ / Page+
 Tv Vol-	 Vol-
 Tv Source	 AV / Input / RDS
 Prog-	 CH- / Page-
 CH List	 +  Shift + Smart / List
 Home	 Menu / Home
 Guide	 Guide / EPG / -/--
 Tools	 Setup / OPT /
 Up	 Up







Originale	Sostituto
Power Tv	Power
TTX/MIX	Text / Goto
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
I<<	I<< / Preset-
>>I	>>I / Preset+
<<	<< / Tune-
>>	>> / Tune+
Stop	Stop / Hold

Originale	Sostituto
Play	Play / Slow
Pause	Pause / Step / Freeze
Vol+	Vol+
Mute	Mute / Dimmer
Prog+	CH+ / Page+
Vol-	Vol-
Source	AV / Input / RDS
Prog-	CH- / Page-
CH List	Shift + Smart / List
Home	Menu / Home
Guide	Guide / EPG / -/-
Tools	Setup / OPT /
Up	Up
Info	Info / Angle
Left	Left
Enter	OK
Right	Right



