


 


 
 

 


 

 

 
 
 

 
 
 

 

 


 









Originale	Sostituto
 Power	 Power
 TV	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Enter	 Smart
 PRE-CH	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

Originale	Sostituto
 Source	 AV
 P+	 Ch +
 P-	 Ch -
 CH List	 List
 Menu	 Menu
 FAV CH	 Shift + Pre Ch
 Tools	 Options
 Return	 Back
 Info	 Info
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Red	 Red
 Green	 Green





Originale		Sostituto		Originale		Sostituto	
	Yellow		Yellow				
	Blue		Blue				
	TTX/Mix		Text				
	Media.P		Media				
	P.Size		Format				
	Dual		Dual				
	Guide		Guide				
	Subt.		Subt				
	<<		<<				
	Pause		Pause				
	>>		>>				
	Rec		Rec				
	Play		Play				
	Stop		Stop				

