



 

 
 
 

 
 






 



 
 
 
 






 





Originale	Sostituto
 Power	 Power
 Source	 AV
 HDMI	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TTX/MIX	 Text
 PRE-CH	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -

Originale	Sostituto
 Mute	 Mute
 PR+	 Ch +
 PR-	 Ch -
 CH List	 List
 Smart/Hub	 Smart
 Menu	 Menu
 Guide	 Guide
 Tools	 Options
 Info	 Info
 Return	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Red/A	 Red





Originale	Sostituto	Originale	Sostituto
 Green/B	 Green		
 Yellow/C	 Yellow		
 Blue/D	 Blue		
 P.Mode	 3D		
 SRS	 TV/R		
 Dual I-II	 Dual		
 E-Manual	 D. Menu		
 P.Size	 Format		
 AD/Subt	 Subt		
 <</ <<	 <<		
 >>/>>	 >>		
 Play	 Play		
 Pause	 Pause		
 Stop	 Stop		
 Rec	 Rec		

