
























 








 




Originale	Sostituto
 Power	 Power
 Power Tv	 Shift + Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv/Radio	 TV/R
 Pre-CH	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

Originale	Sostituto
 CH+	 Ch +
 CH-	 Ch -
 CH List	 List
 Tv Portal	 Media
 Menu	 Menu
 EPG	 Guide
 Tools	 Options
 Info	 Info
 Return	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Red	 Red
 Green	 Green





Originale	Sostituto	Originale	Sostituto
	Yellow		Yellow
	Blue		Blue
	Text		Text
	Audio		Dual
	SUB		Subt
	Rec		Rec
	<<		<<
	Pause		Pause
	Play		Play
	Stop		Stop
	>>		>>

