







 












 

 

 












Originale	Sostituto
 Power	 Power
 Source	 AV
 HDMI	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TTX/MIX	 Text
 Pre-CH	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -

Originale	Sostituto
 Mute	 Mute
 CH.List	 List
 P+	 Ch +
 P-	 Ch -
 Menu	 Menu
 Guide	 Guide
 Smart Hub	 Smart
 Tools	 Options
 Info	 Info
 Return	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Red	 Red





Originale

Sostituto

	Green		Green
	Yellow		Yellow
	Blue		Blue
	Family Story		Media
	Search		TV/R
	3D		3D
	Support		D. Menu
	P.Size		Format
	AD/Subt.		Subt
	<</I<<		<<
	Pause		Pause
	>>/>>I		>>
	Rec		Rec
	Play		Play
	Stop		Stop

Originale

Sostituto