




 
 


 


 

 

 

 




 

 
 


 


 

 

 
 
 
 


 
 




 



 
 


 
 
 

 
 

 
 
 
 






 



 

 


 

 

 
 


 
 



Originale	Sostituto
 Power	 Power
 Source	 AV
 Open/Close	 Eject
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Dolby PL	 Dual
 DSP/EQ	 Guide
 I<<<	 I<<<

Originale	Sostituto
 >>I	 >>I
 <<	 <<
 >>	 >>
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Repeat	 Text
 Tuning+	 Ch +
 Tuning-	 Ch -
 Disc Menu	 D. Menu
 Menu	 Menu
 Title Menu	 TV/R
 Tools	 Options
 Info	 Info







 


 



 
 

 






 








 





 
 
Originale		Sostituto	
	Return		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Red		Red
	Green/Tuner		Green
	Yellow/MO/ST		Yellow
	Blue/CD Ripping		Blue
	Dimmer		Subt
	S.Vol		Format
	P.Bass/Audio Upscale		3D

Originale		Sostituto	





Originale	Sostituto
 Power	 Power
 Function Tv	 AV
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 <<	 <<
 >>	 >>
 Stop	 Stop
 Play	 Play

Originale	Sostituto
 Pause	 Pause
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 CH+	 Ch +
 CH-	 Ch -
 Menu	 Menu
 Tools	 Options
 Info	 Info
 Return	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Red	 Red





Originale		Sostituto	
TUNER MEMORY B	Green	B	Green
MO/ST C	Yellow	C	Yellow
CD RIPPING D	Blue	D	Blue

Originale		Sostituto	

