





 

 



 




 


 
 







 








Originale	Sostituto
 Power	 Power
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TTX/MIX	 Text
 PRE-CH	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

Originale	Sostituto
 CH List	 List
 CH+	 Ch +
 CH-	 Ch -
 Settings	 Options
 Home	 Smart
 Guide	 Guide
 E-Manual	 D. Menu
 Info	 Info
 Return	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Red	 Red
 Green	 Green





Originale		Sostituto		Originale		Sostituto	
	Yellow		Yellow				
	Blue		Blue				
	Pic Size		3D				
	AD/Subt.		Subt				
	Picture		Format				
	<</ <<		<<				
	Stop		Stop				
	Play		Play				
	Pause		Pause				
	>>/>>		>>				

